




Make Storm Door Adapter Strips

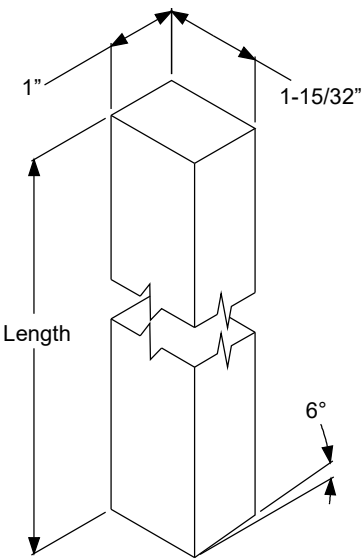

4-9/16" Base Adapter Strip

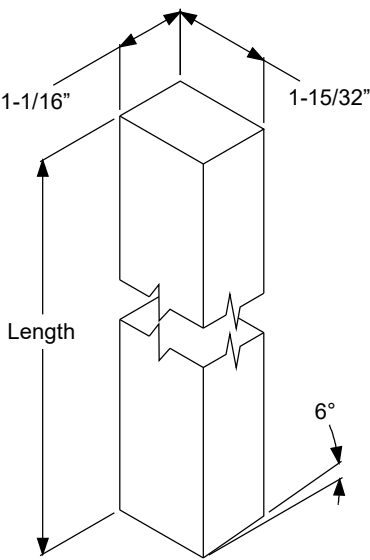

Face Adapter Strip

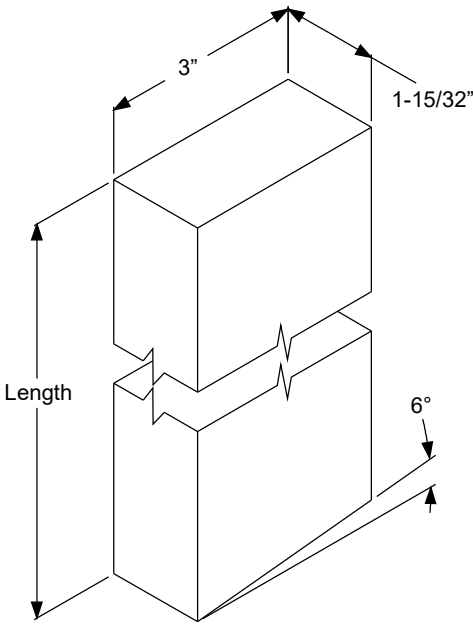

6-9/16" Base Adapter Strip

4-9/16" Table of Lengths

PLATFORM		UNIT SIZE	Face Adapter	Base Adapter
BOOK (BK)	S	6/6	78.169	77.557
		6/8	80.717	80.105
		7/0	84.717	84.105
		8/0	96.717	96.105
HB	U	6/6	77.960	77.348
UI REV (UI)	U	6/8	80.311	79.699
		7/0	84.311	83.699
		8/0	96.311	95.699
HYBRID (HB)	U	6/8	80.514	79.902
		7/0	84.514	83.902
		8/0	96.514	95.902

Instructions

One set is used at each mullion.
(2 pieces - 1 face and 1 base adapter)

Face Adaptor - Use standard inswing composite mull casings. Cut to lengths as shown, and bevel one end as shown.

4-9/16 Base Adaptor - Use standard inswing composite mull casings. Machine width, cut to length, and bevel one end as shown.

6-9/16 Base Adaptor - Purchase 6-9/16 composite storm door base adaptor. Cut to length, and bevel one end as shown.

6-9/16" Table of Lengths


PLATFORM		UNIT SIZE	Face Adapter	Base Adapter
BOOK (BK)	S	6/6	78.379	77.767
		6/8	80.927	80.315
		7/0	84.927	84.315
		8/0	96.927	96.315
HB	U	6/6	78.170	77.558
UI REV (UI)	U	6/8	80.521	79.909
		7/0	84.521	83.909
		8/0	96.521	95.909
HYBRID (HB)	U	6/8	80.724	80.112
		7/0	84.724	84.112
		8/0	96.724	96.112

Apply Storm Door Adapter

First fasten base adapter strips using #10 x 2" screws for 4-9/16" jambs or #10 x 4" screws for 6-9/16" jambs as shown.

Apply face adapter strips directly over base adapters using 2-1/2" staples.

If installing with provided hidden fastener system, install with provided screws..

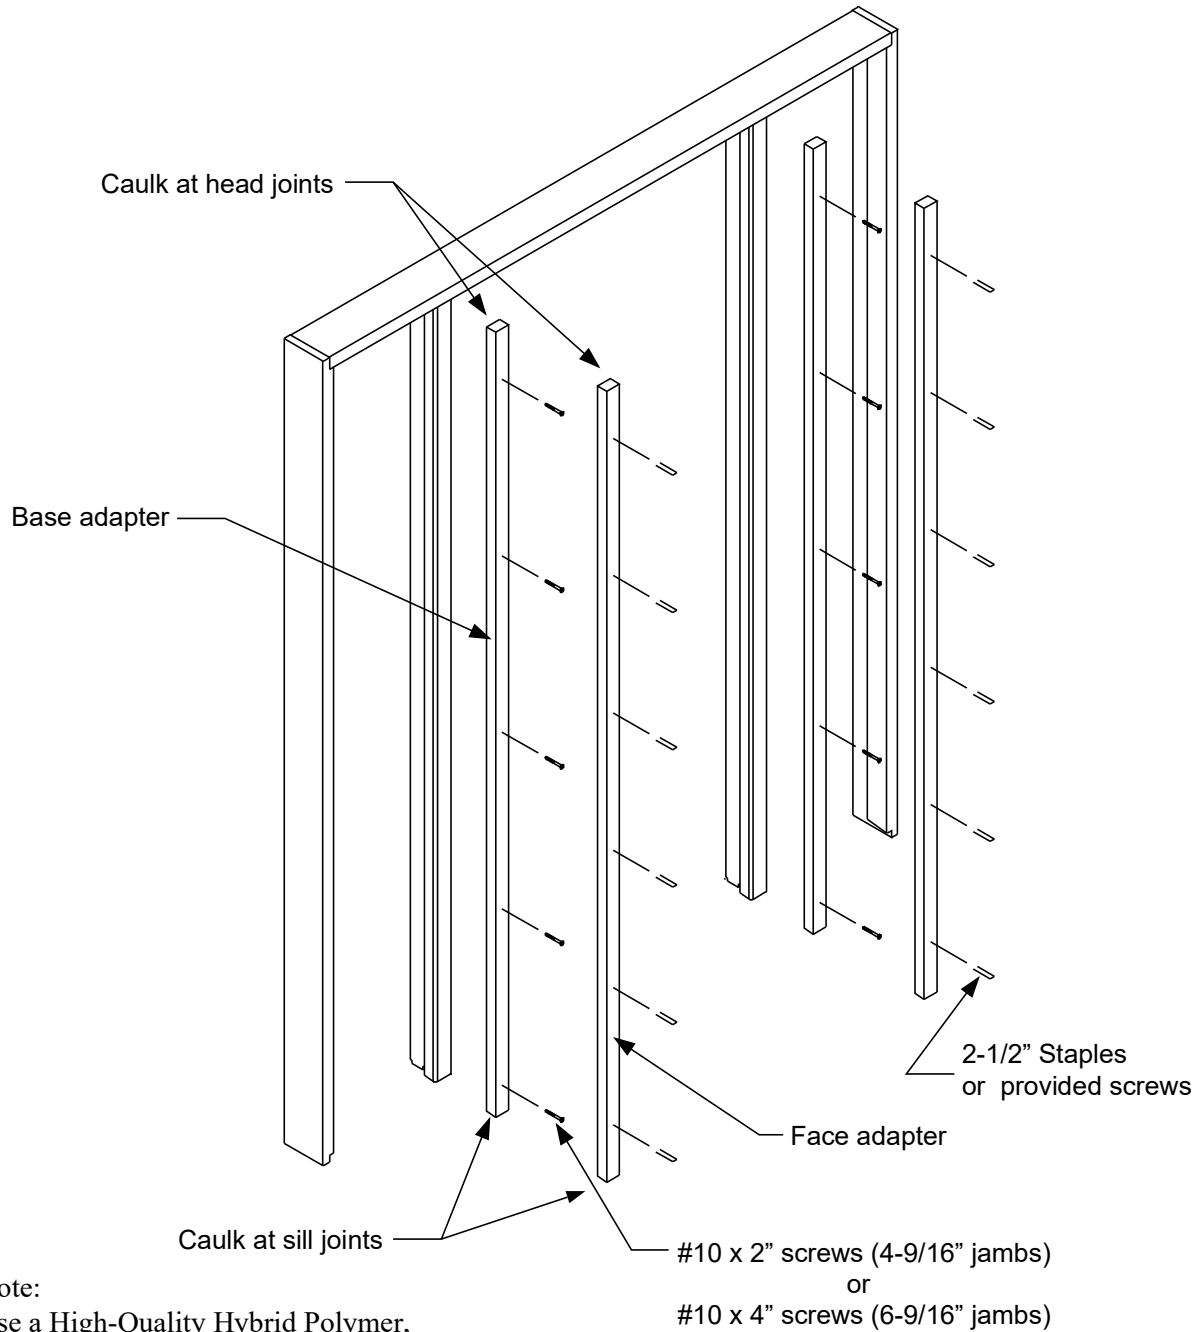

Sill removed for clarity.